


Ditec NES100FCM

IP2169 • 2018-02-12


Istruzioni kit finecorsa magnetici per Ditec NEOS e ION

Instructions of Ditec NEOS and ION magnetic limit switch kit

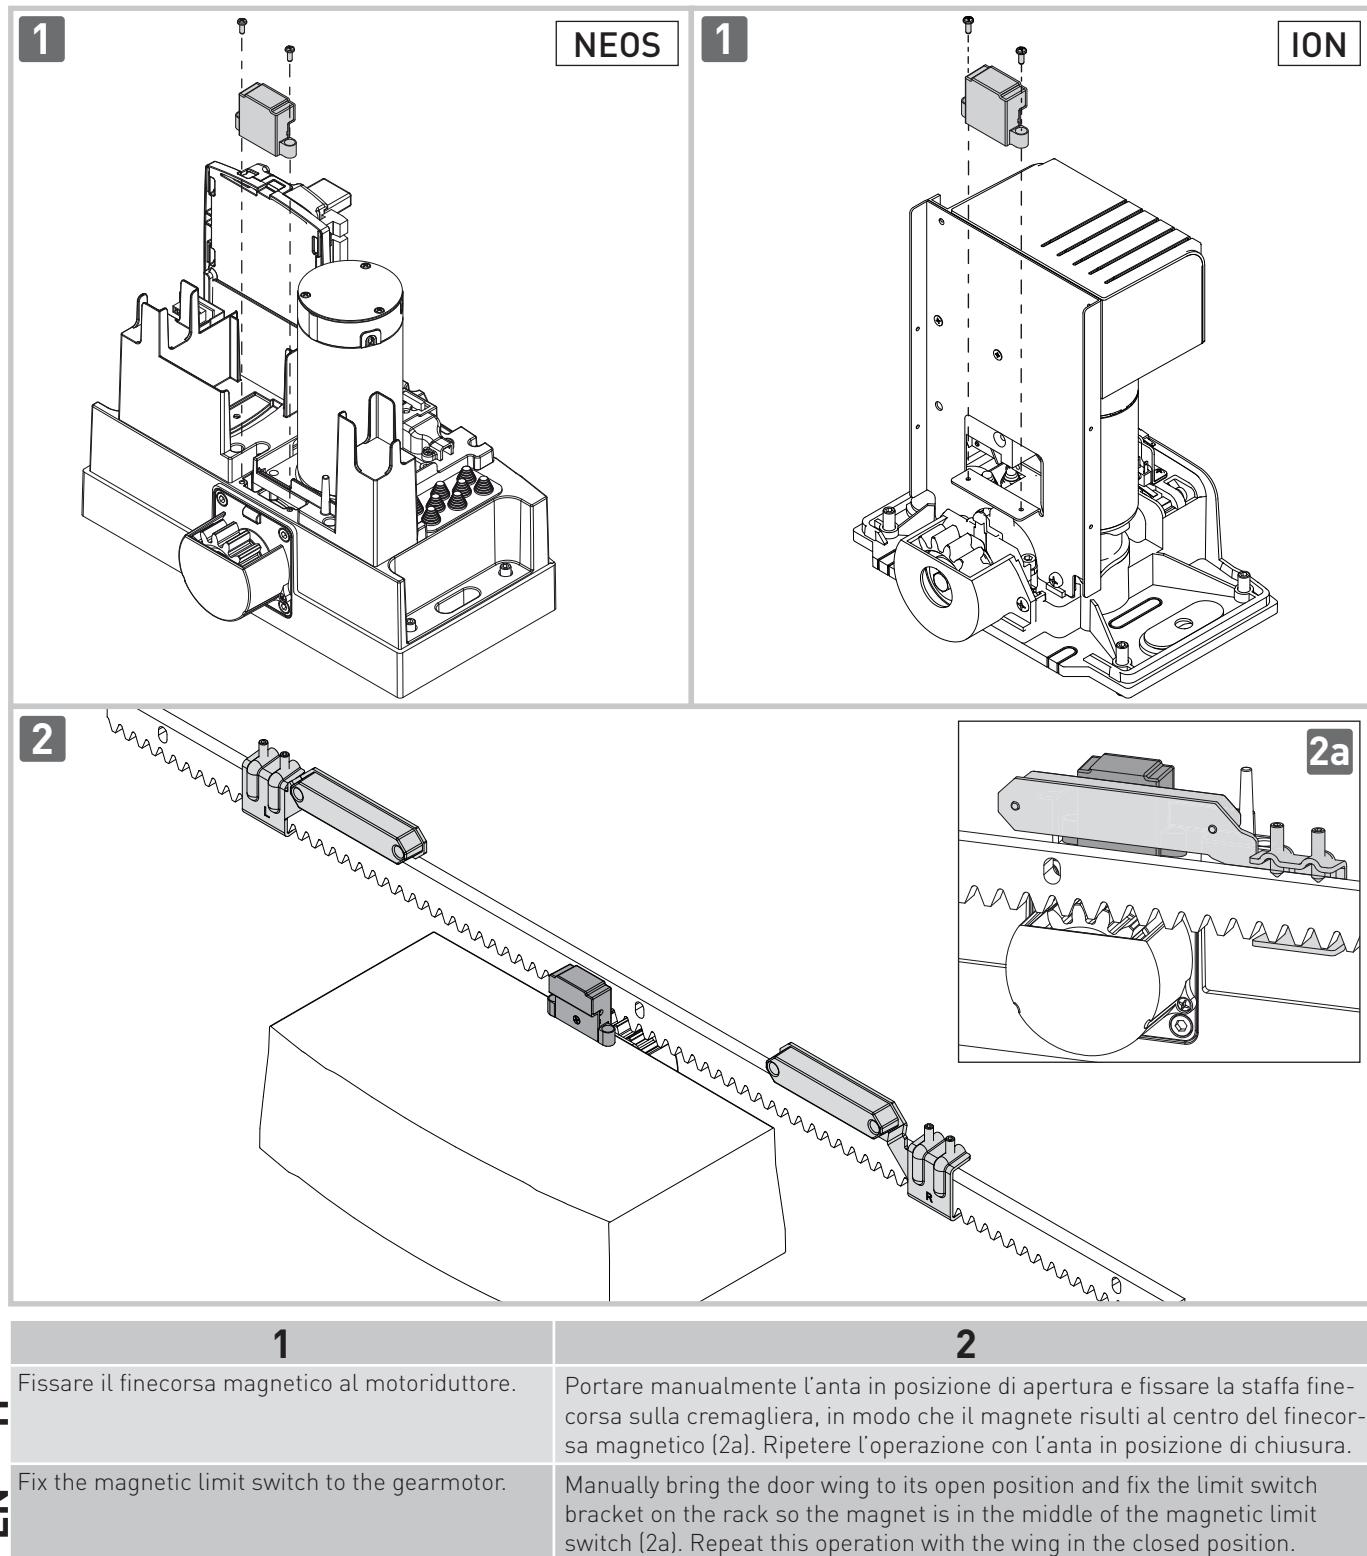

3

CS12 LCU48

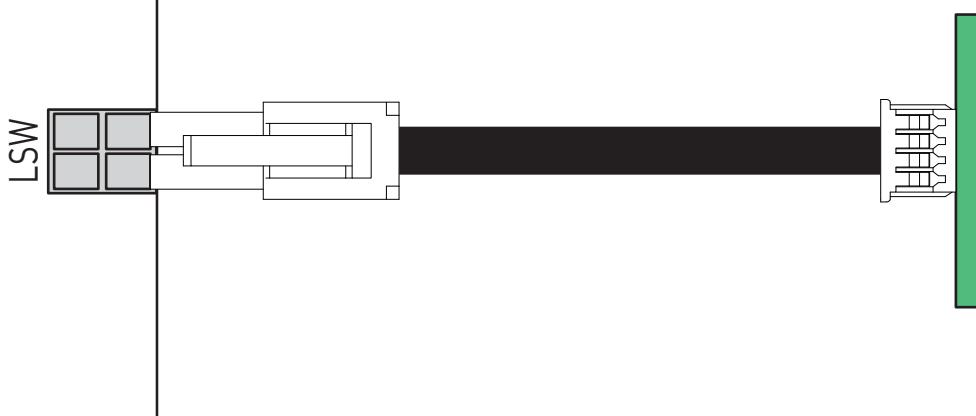

IT Collegare il finecorsa magnetico al quadro elettronico mediante il cablaggio in dotazione. Attivare dal menù **RP** la funzionalità finecorsa desiderata (Menù **FA - FC**).

EN Connect the magnetic limit switch to the control panel by means of the supplied wiring. From the **RP** menu, activate the required limit switch function (Menù **FA - FC**).

IT Dare alimentazione ed eseguire alcune manovre, regolare le staffe finecorsa in modo che il cancello si fermi circa 20 mm prima della battute meccaniche di apertura e chiusura.

i NOTA: eseguire le regolazioni dei menù **BR** e **RP** gradatamente, e solo dopo aver effettuato almeno tre manovre complete, per permettere al quadro elettronico di tararsi correttamente e rilevare eventuali attriti durante le manovre.

EN Power, then perform some operations. Adjust the limit switch brackets so that the gate stops about 20mm before the opening/closing mechanical stops.

i NB: make the adjustments on the menus **BR** and **RP** gradually, and only after performing at least three complete operations, to allow the control panel to be correctly calibrated and to detect any friction during the operations.

ENTRE/MATIC



Entrematic Group AB
Lodjursgatan 10
SE-261 44, Landskrona
Sweden
www.entrematic.com

